Rough In Instructions

1. Install IC107BP8VB in the center plywood on its side so that port one starts on the left side, and it's mounted with the 10” portion horizontally.

2. Install two nail on boxes (NB) on the studs as shown at 28” on center.

3. Install the surface mount box (AP) on the face of the stud as shown on the diagram. Ensure that the top of the box is 6 inches from the top of the wall, the box is centered on the stud. It should also be level and secured in place with two screws.

4. Label everything on the plywood

5. Do not do anything with CR until instructed

6. Do not do anything with BO's until instructed

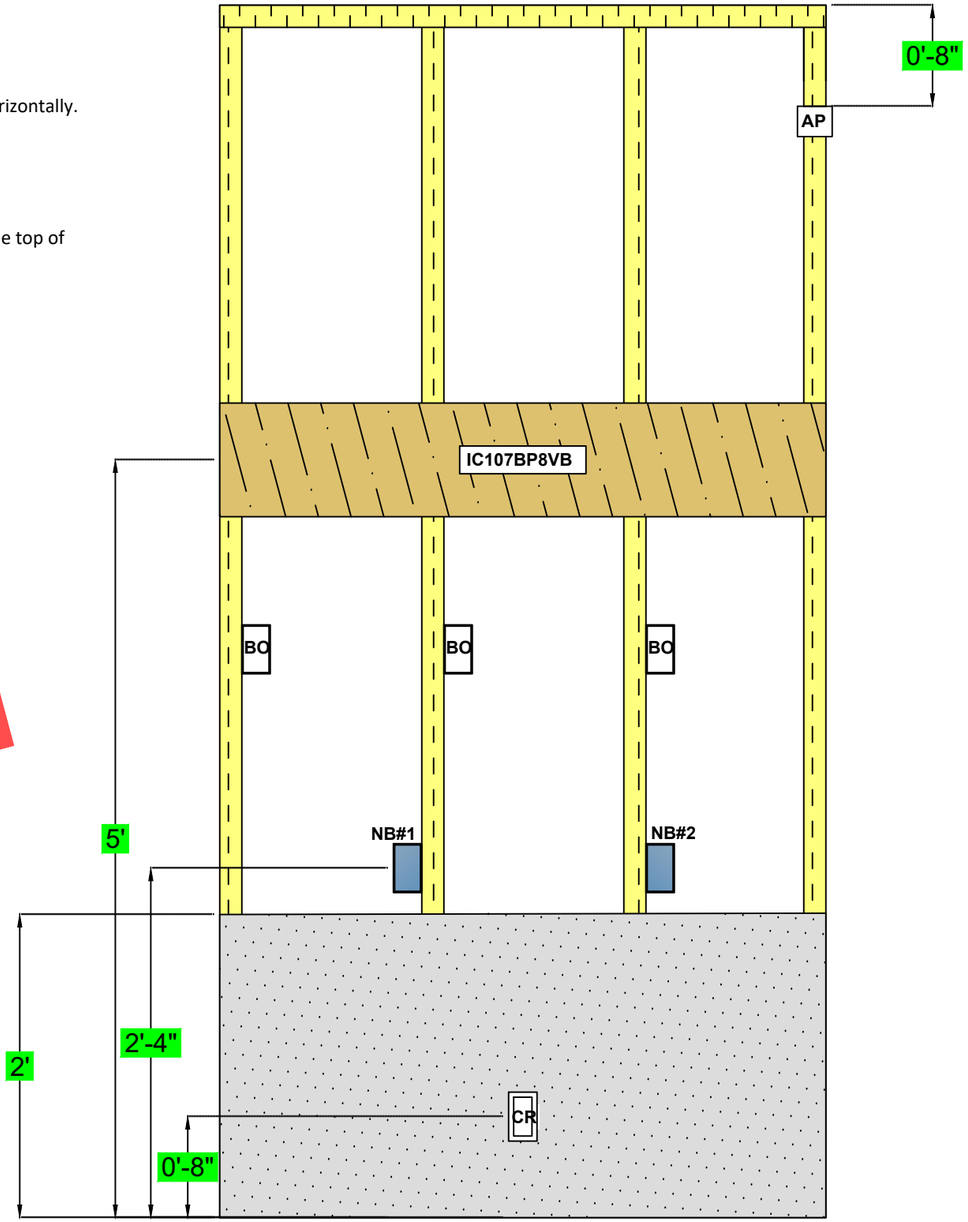

This drawing is provided for SkillsUSA competition use only and is subject to minor clarification or revision prior to the competition. Final instructions will be provided during the official contest briefing.

CHK BY	DATE	SCALE 1"=1'	SIZE A
APPR BY	DATE	REVISION No.0	
DRAWN BY SETH JAMISON	DATE 01/06/2026		
JOB NO. 0	DWG NO. 202304	SHEET 1 OF 1	REV PRELM

CONFIDENTIALITY NOTE:
The information contained in this drawing is intended for use only by Jamison Electric, Inc. and the organization listed below. The information is confidential and any copying, distribution or dissemination without the consent of Jamison Electric, Inc. is STRICTLY PROHIBITED

DRAWN BY SRJ DATE 01/06/2026

Skill USA 2026
Virginia State Competition

JAMISON ELECTRIC
1345 Algoma Road
Callaway, VA 24067
(540) 483-1940

TITLE
MOON DOLLARS COFFEE
MAIN TELECOM ROOM LAYOUT