
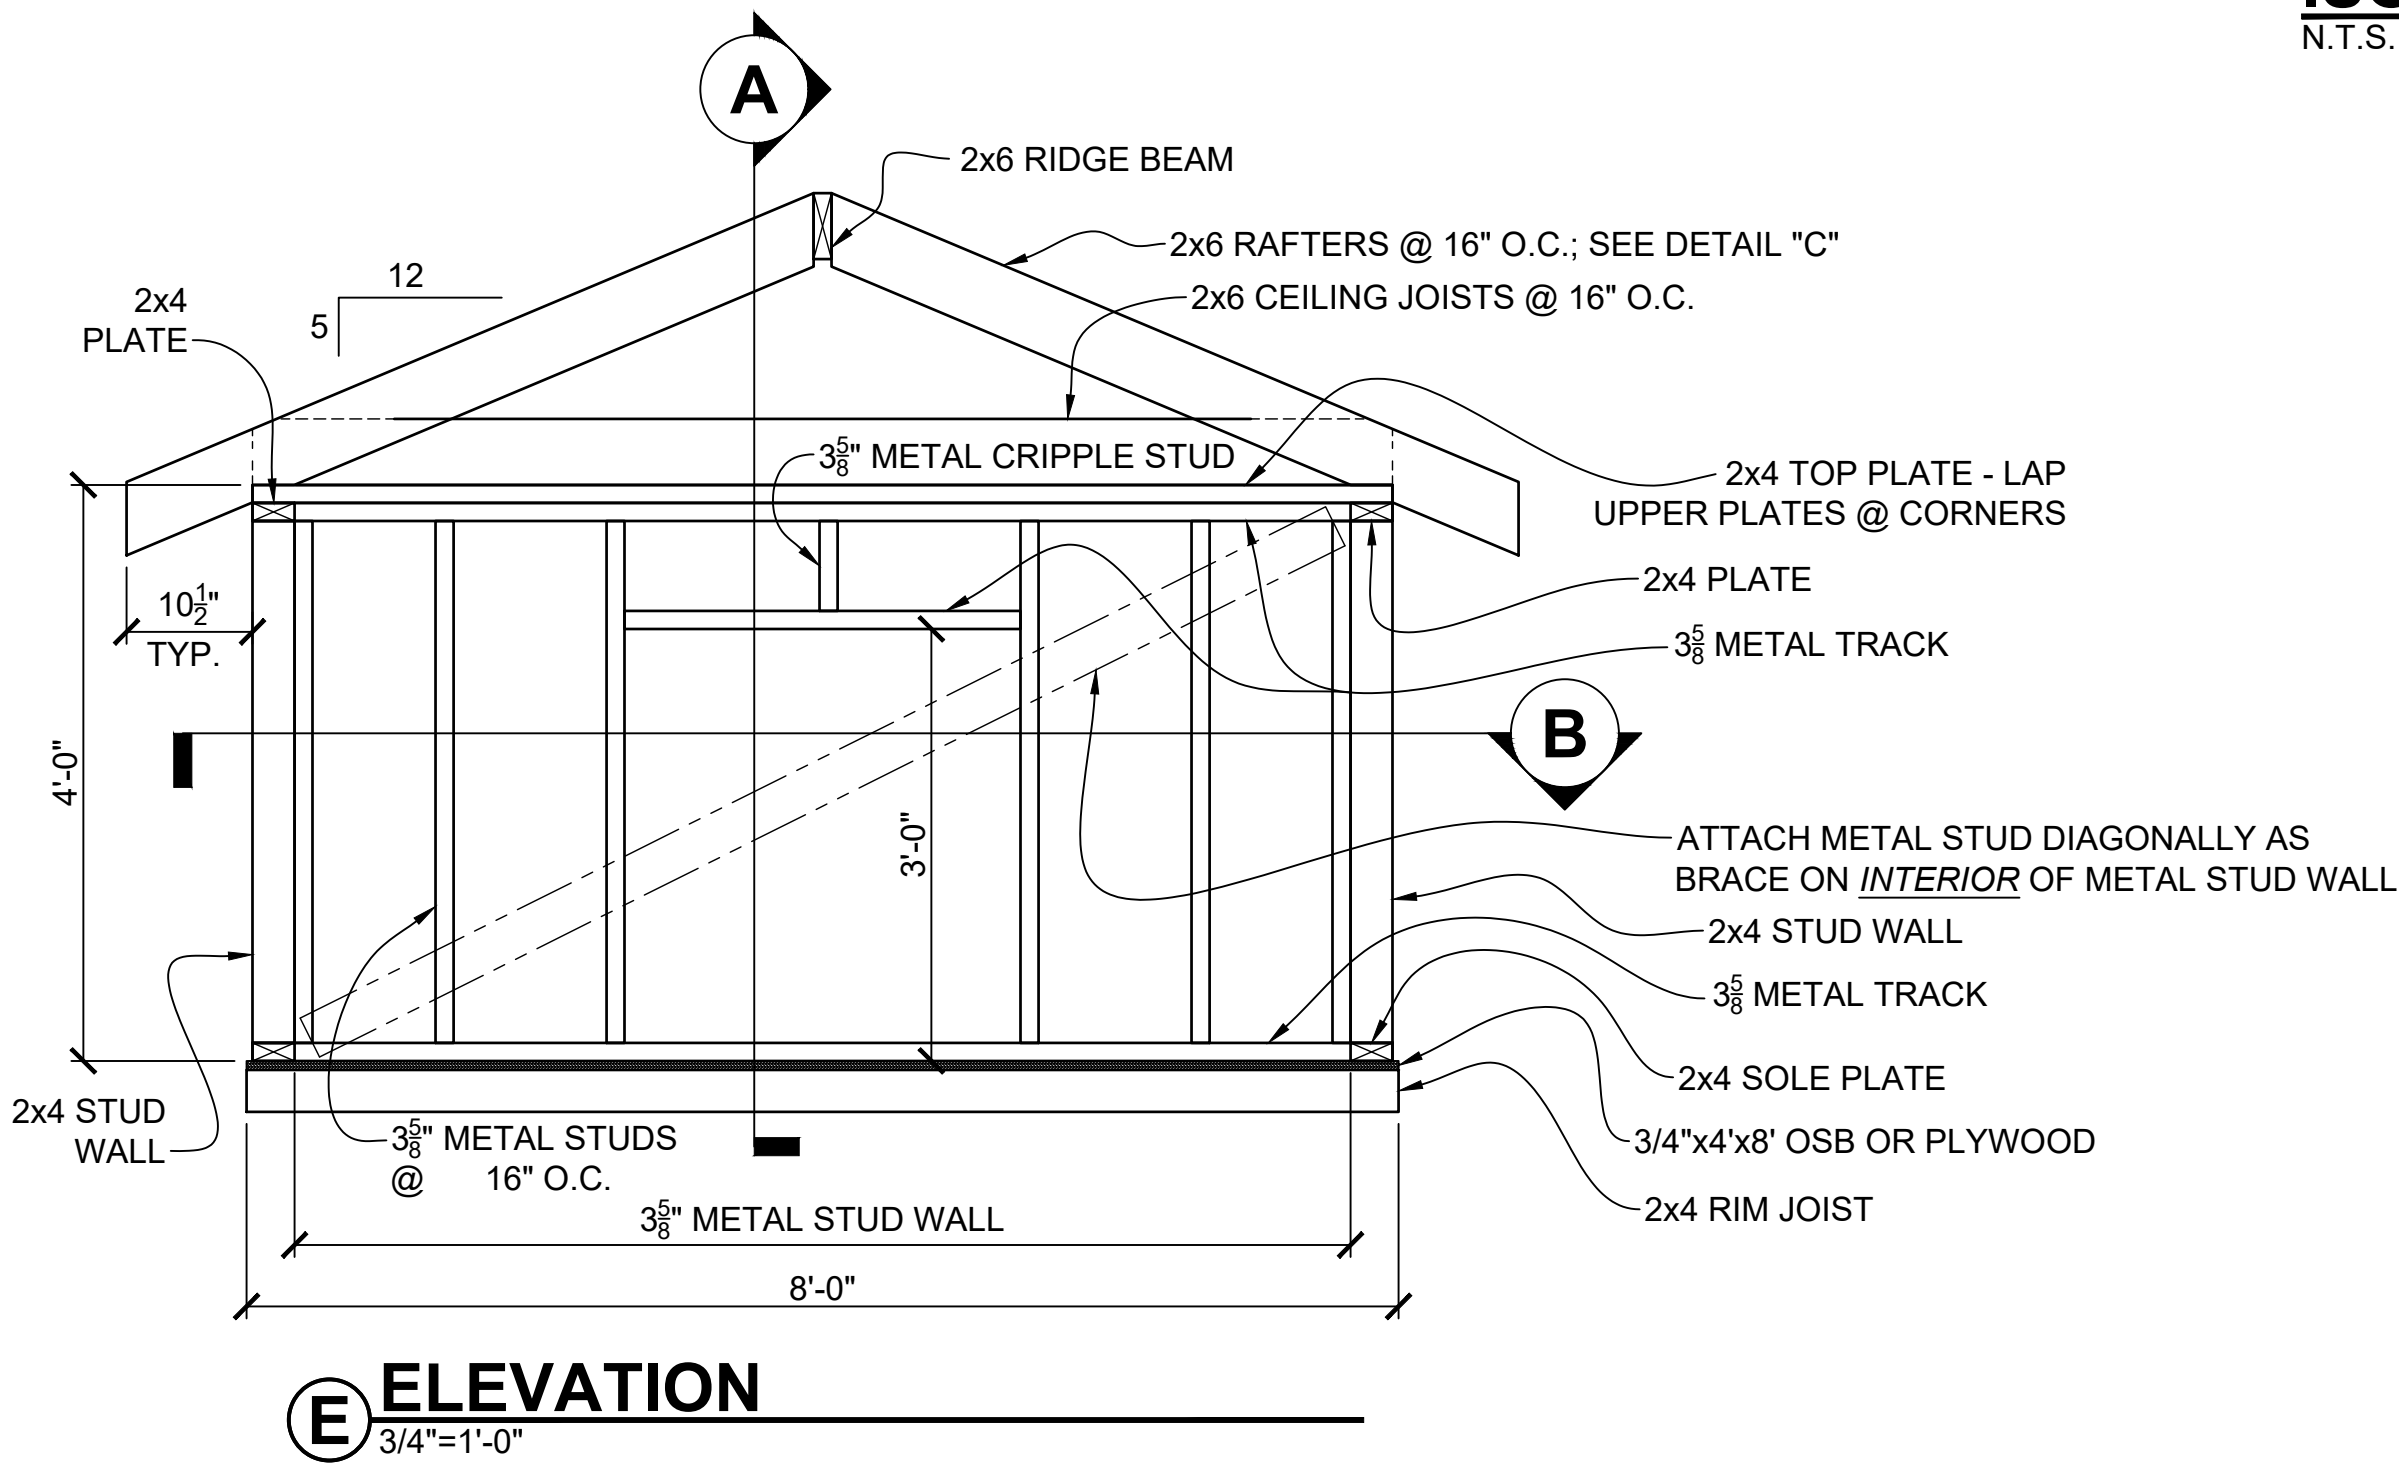
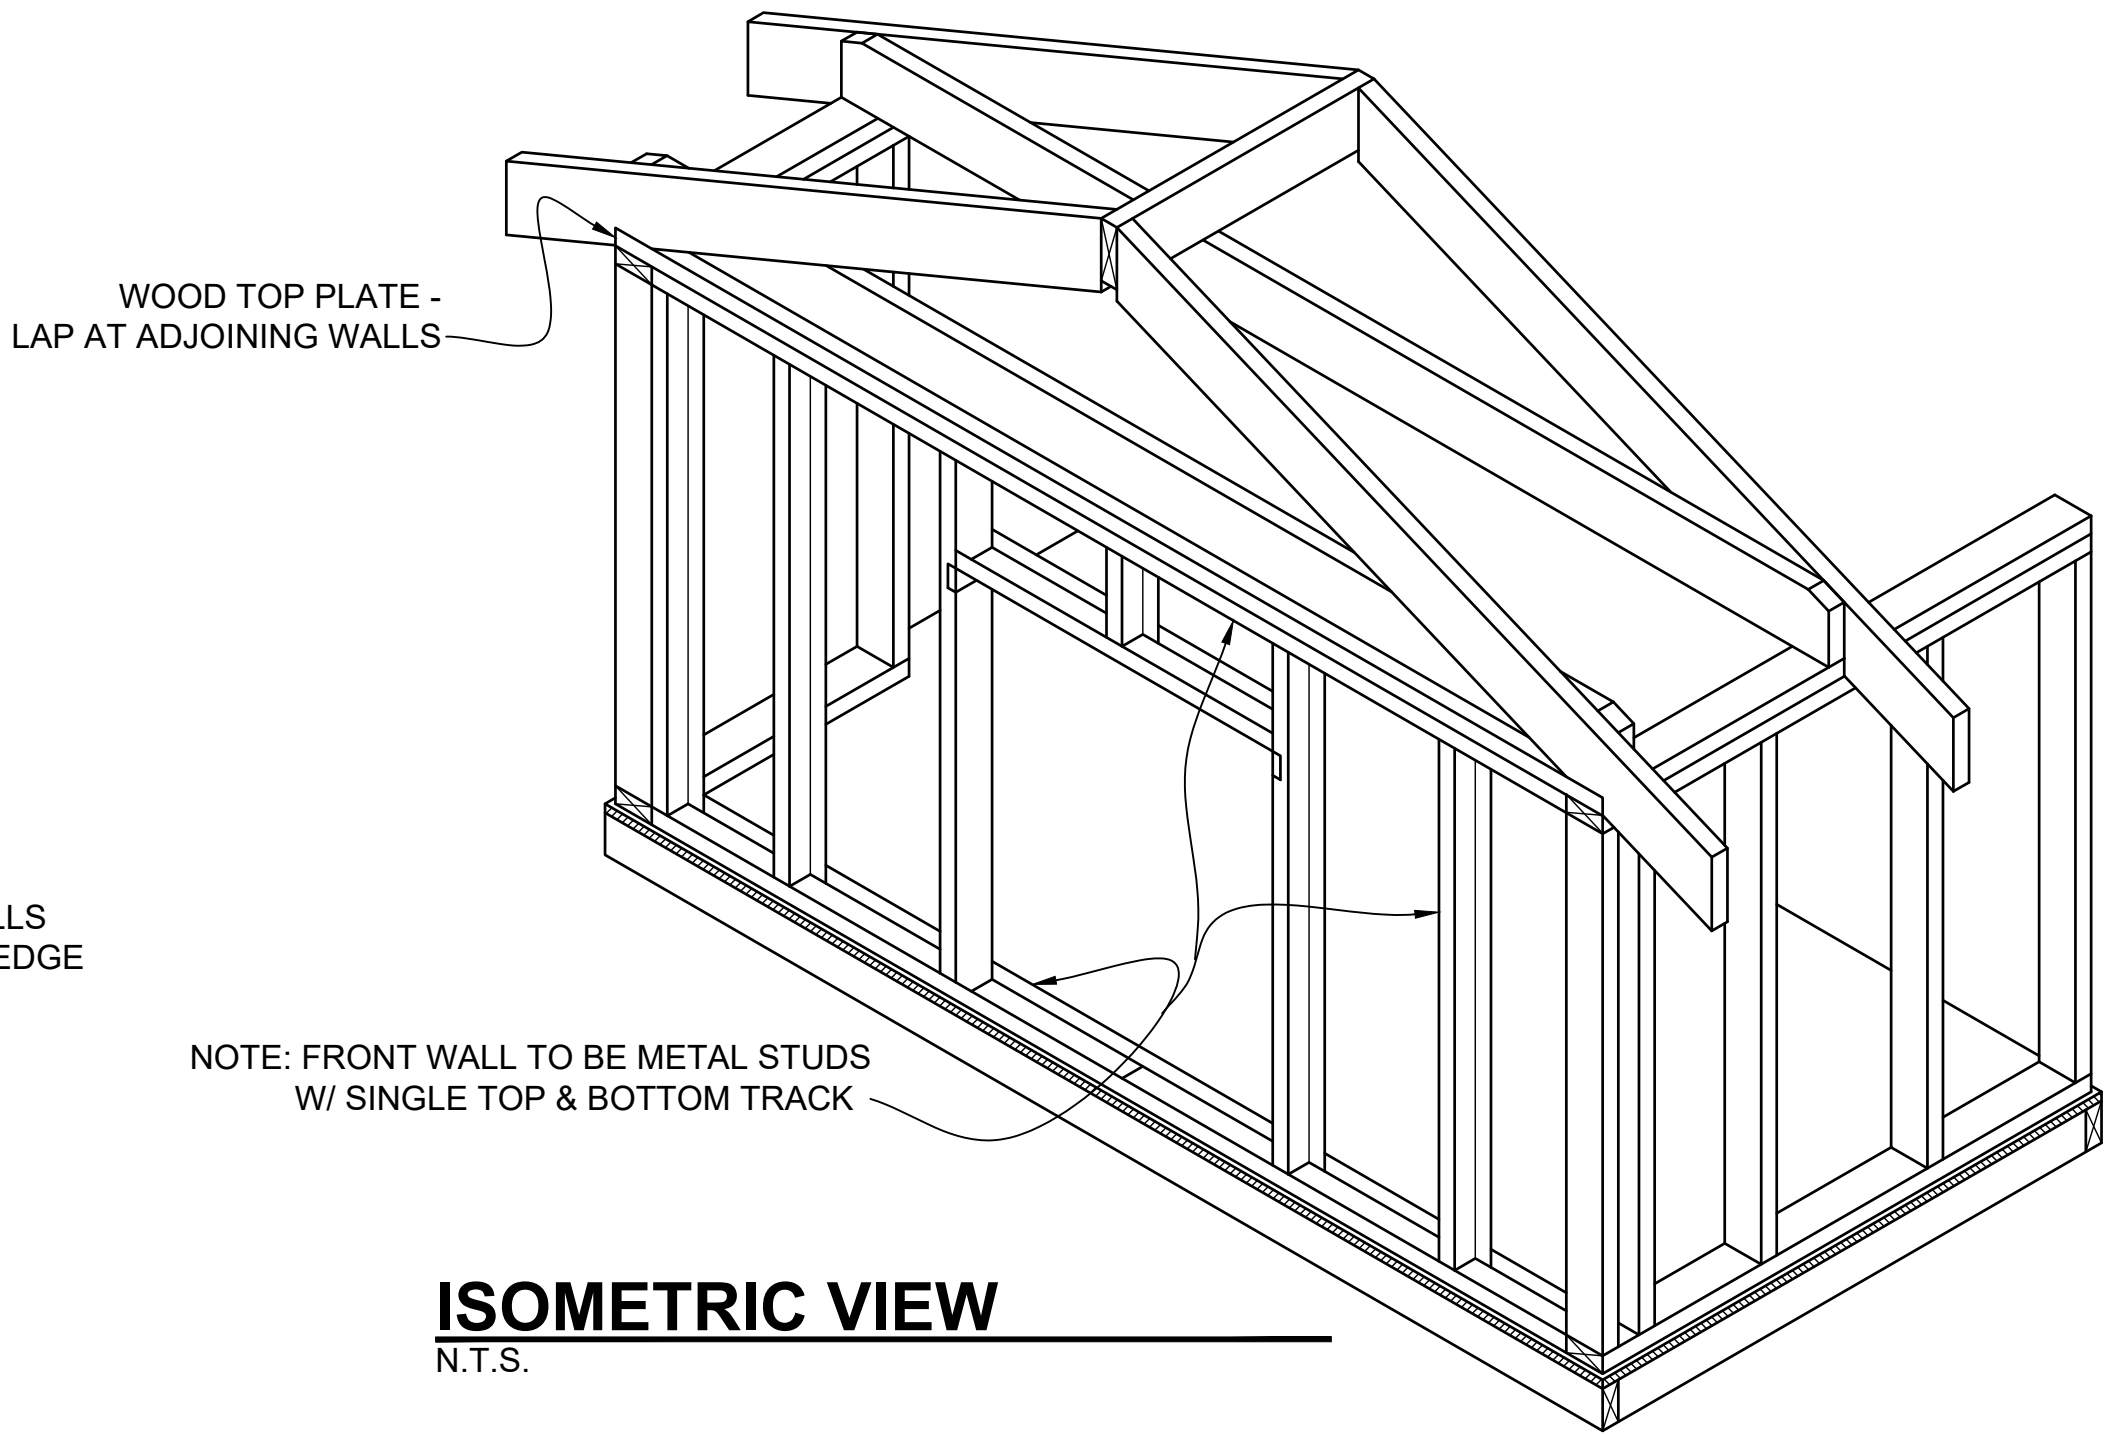
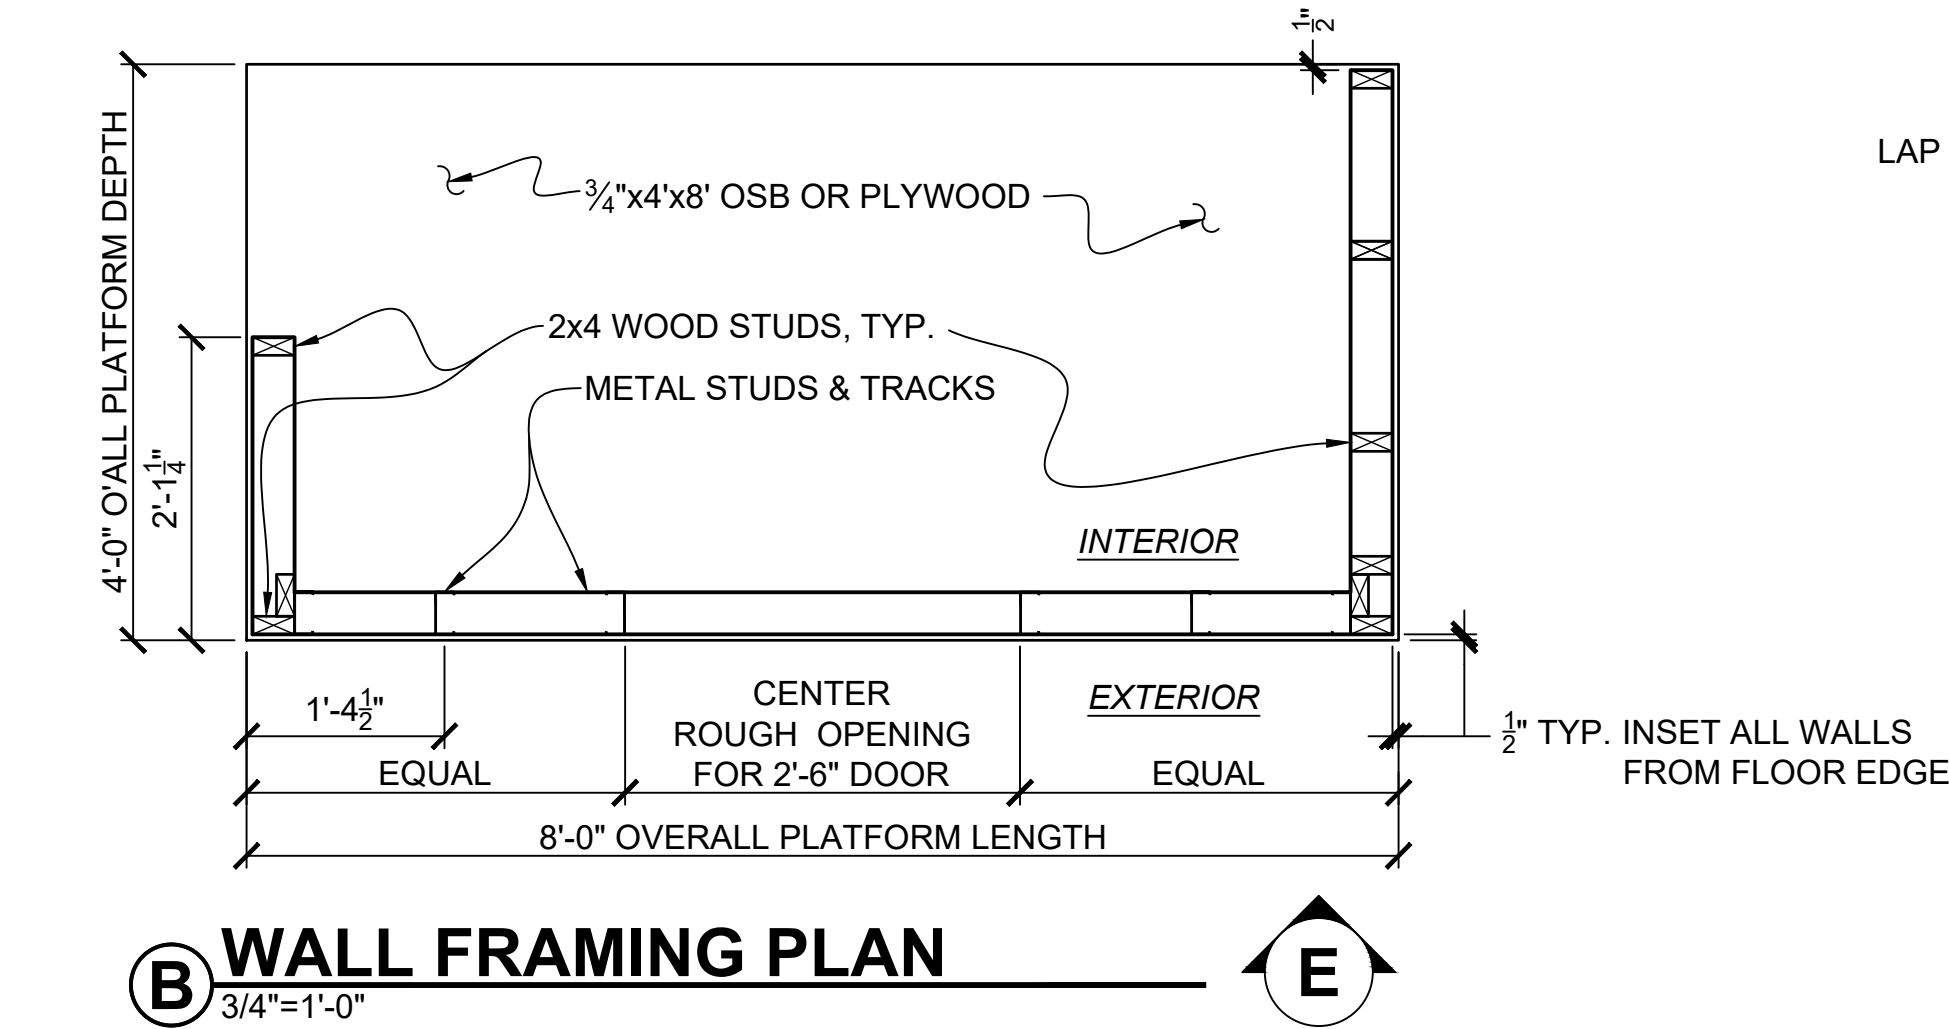


INSTRUCTIONS

- 1) USING THE 2x4x8' STOCK, LAY OUT AND ASSEMBLE THE FLOOR JOIST SYSTEM. AFTER ASSEMBLY, ATTACH THE 4'x8' SHEET OF OSB TO THE FLOOR JOISTS USING 4 NAILS (ONE AT EACH CORNER).
- 2) USING THE 2x4x8' & METAL STUD STOCK, CUT AND ASSEMBLE THE WALLS. NOTE: FRAME THE DOOR ROUGH OPENING PER MANUFACTURER'S SPECIFICATIONS OR 2" PLUS THE NOMINAL SIZE.
- 3) USING THE 2x6x8' STOCK, CUT AND ASSEMBLE THE CEILING JOISTS AND RAFTERS.
- 4) CHECK YOUR WORK. LEAVE YOUR TAPE MEASURE, SQUARE AND LEVEL ON YOUR PROJECT AND REPORT TO THE JUDGES' STATION.
- 5) THE JUDGES WILL CALL YOU BACK TO DISASSEMBLE YOUR PROJECT.

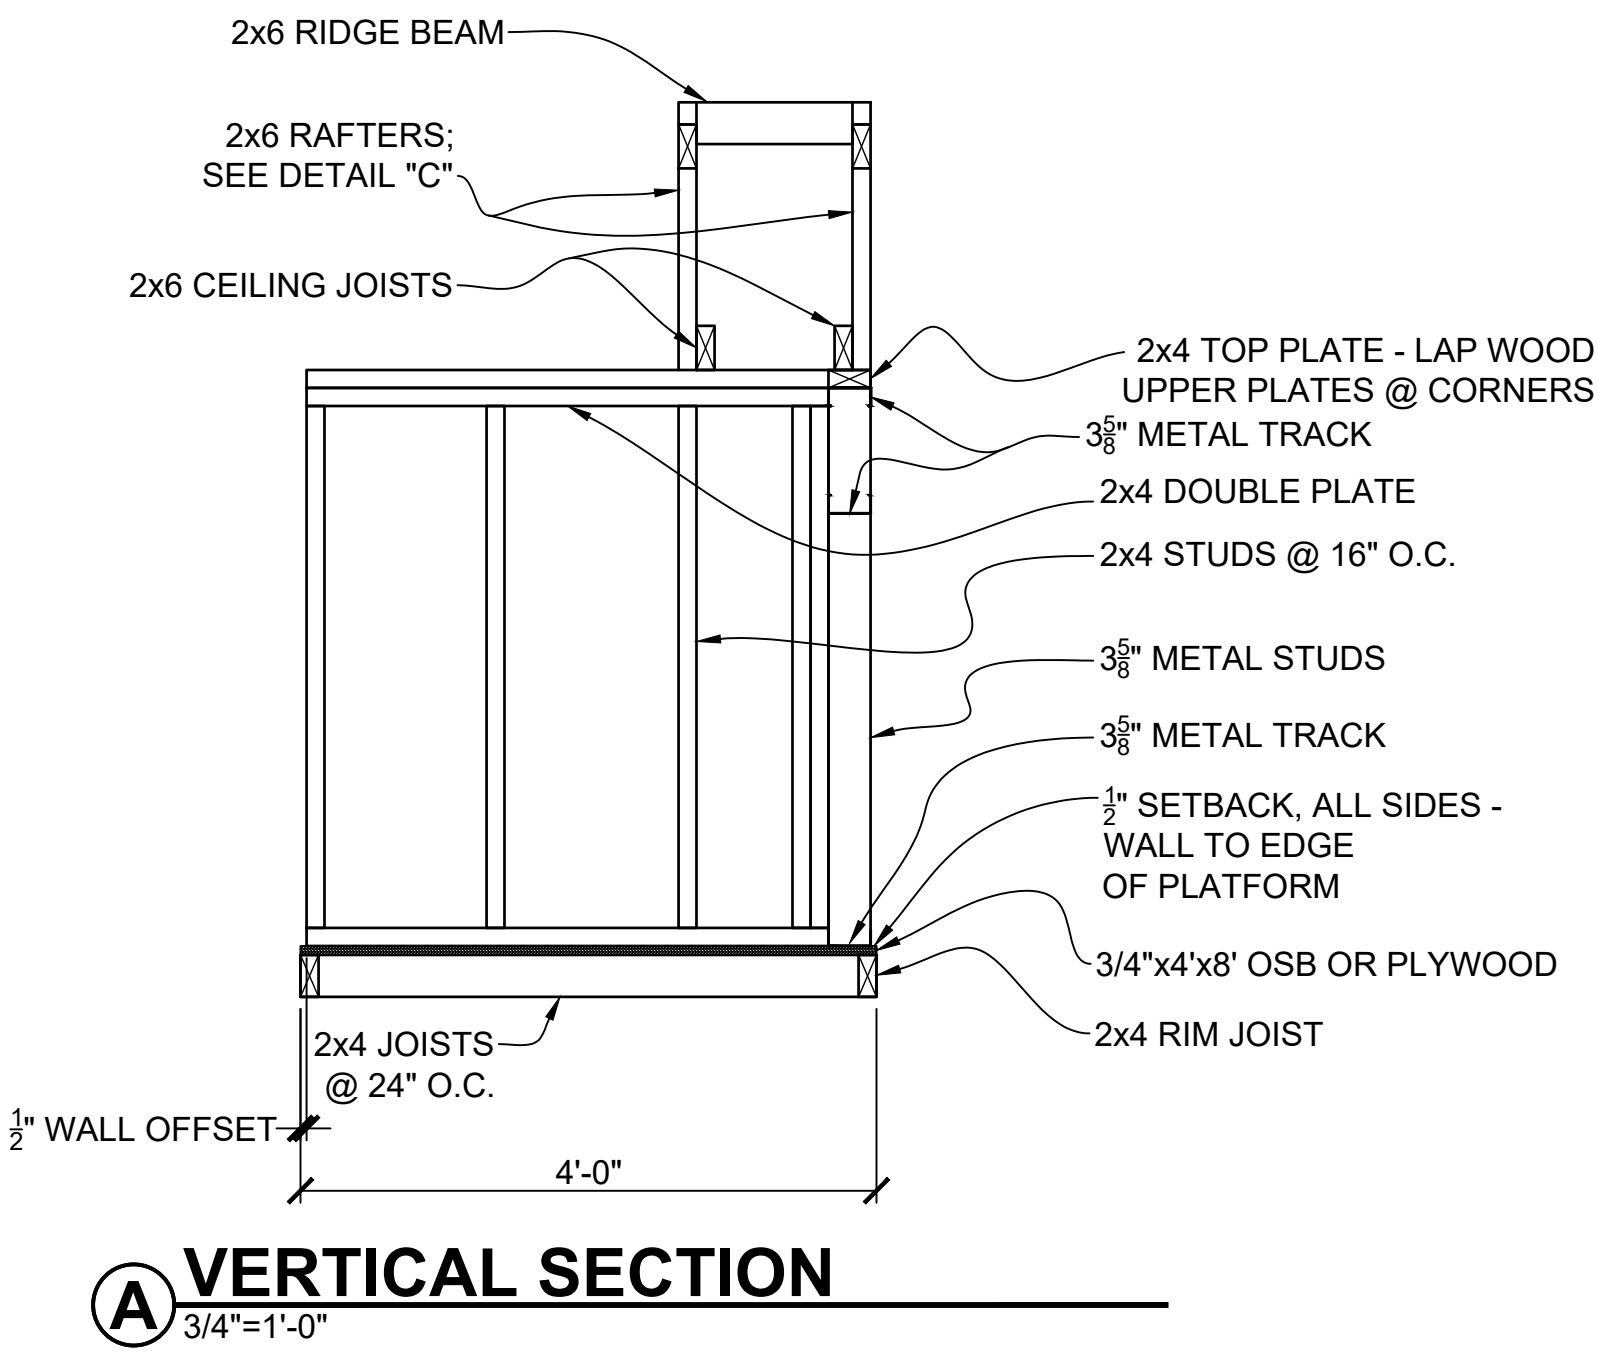

MATERIALS LIST

- | | |
|--------|---|
| 1 LB. | 8D SINKERS |
| 1 LB. | "TEKS" #8 x 1 1/2" PHILLIPS SELF-DRIVING SHEET METAL SCREWS |
| 1 LB. | "FAS-N-TITE" #6 x 1 1/2" BUGLE COARSE-THREAD DRYWALL SCREWS |
| 5 LBS. | 16D SINKERS |
| 1 | 3/4"x4"x8' PLYWOOD (DECK) |
| 1 | 1/2"x3 1/2"x35" PLYWOOD (HEADER FLITCH BOARD) |
| 2 | 2x6x12' (RAFTERS) |
| 3 | 2x6x8' (CEILING JOISTS & RIDGE) |
| 13 | 2x4x8' STUDS (FLOOR JOISTS, STUDS, PLATES, BRACES) |
| 2 | 3/8"x10' METAL TRACK |
| 5 | 3/8"x8' METAL STUDS (INCLUDING WALL BRACE) |

